


# INSTALLATION INSTRUCTIONS

## TOOLS NEEDED:

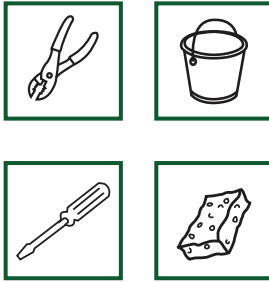

### DO NOT USE:



1. Turn off water supply. Flush toilet and remove excess water from tank with sponge. Remove water supply line from bottom of toilet fill valve.
2. Unbolt tank from bowl, lift off tank. Remove washers, nuts and bolts from bottom of tank.
3. Install bolts as follows: Slide rubber washer under bolt head and insert bolt through tank. Install brass washer, then thread hex nut onto bolt. Carefully tighten bolt until snug. Check tank-to-bowl gasket. If worn, replace with Fluidmaster Model 6100 gasket.
4. Place tank back on bowl so that sponge gasket fits evenly. Install rubber washer, brass washer, then wing nut onto bolt. Repeat for other side. Tighten nuts evenly. **DO NOT OVERTIGHTEN** or bowl may crack.
5. Reconnect water supply line to toilet tank fill valve. Turn on water supply.

