
FLUIDMASTER® 7514 Reinforced extra thick wax ring kit Installation instructions


INSTRUCTIONS: Be sure that wax gasket is at least 70°F to insure proper flow of wax.



Press reinforced wax ring with flange on bowl outlet, extend flange away from the bowl.

Set bowl in place and use body weight to compress wax. Twist bowl slightly to spread wax.

4. Place washer and nut on bolt. Tighten bolts carefully to prevent breaking bowl.

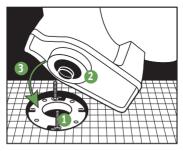

For floor outlet toilet bowls. Ready for use at 70°F temperature. Will not harden or deteriorate. Forms a gas-tight, odor-tight and watertight seal.

