

INSTALL WITH CONFIDENCE

CLICK SEAL FLEXIBLE HOSE CONNECTOR INSTRUCTIONS

Before starting work:

1. Turn off water supply to point of installation.
2. Drain system where necessary.
3. If required, clean all existing threads on mating parts.
4. Some work is subject to regulations - if in doubt consult your water authority or a competent plumber.
5. When installing the Fluidmaster Click Seal® connector, please ensure the product is not: Bent at sharp angles; squashed; kinked; stretched; twisted or split.


CLICK SEAL FITTING

Installation instructions:

1. Place Click Seal nut onto end of tap or toilet valve thread.
2. Turn Click Seal nut clockwise and **HAND-TIGHTEN** until nut clicks.
"The click lets you know it's sealed."®

15mm COMPRESSION FITTING

Installation instructions:

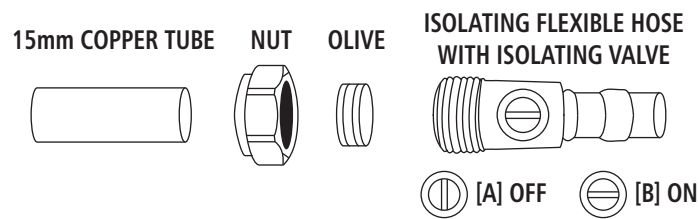

1. Prepare end of copper tube ensuring clean, smooth and bur-free fitting available.
2. Connect the compression joint by sliding the nut then the olive over the copper tube.
3. Position the hose and hand tighten.
4. Tighten compression nut first by hand, then using a suitable wrench tighten firmly.
DO NOT OVER TIGHTEN.
5. Turn 1/4 turn isolating valve to the off position [A].
6. Turn on water supply, gradually turn 1/4 isolating valve to the on [B] position and check for leaks.
Tighten nut further if necessary.
7. If in doubt, contact a competent plumber.