


INSTALL WITH CONFIDENCE

7118E-014



1 Remove old link. Secure new link into position.

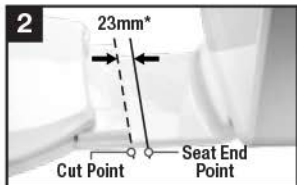

2 Set seat onto link to mark desired seat end point & cut point.

*Fluidmaster Monaco seat cut point distance from seat end point shown.



3 If cut required, cutting line guides reference on back of link as needed.



4 Insert link to seat connection plate.



5 Set seat bolts into pan holes and hand-tighten seat bolt nuts.

WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

To present claims under this warranty, please contact your place of purchase or contact Fluidmaster Australia Holdings Pty Ltd. Note: Original proof of purchase required.

Warranty excludes incorrect installation. Installation shall be in accordance with AS/NZS 3500.1 and AS/NZS 3500.2 (Install with licensed plumber; any installation processed without licensed plumber will void warranty)

Only clean with soap and warm water to maintain quality finish. Do not use harsh chemical cleaners.

