MONACO™
Toilet Seat | Standard

Seat and Hardware

Seat hinge with built-in arrow guides

206
130-170
46
281
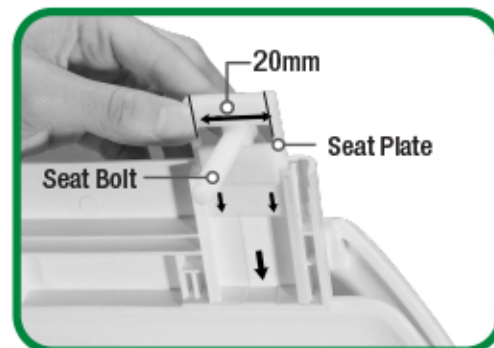410-432
57
409
452,8
220
361
(mm)
361
(mm)
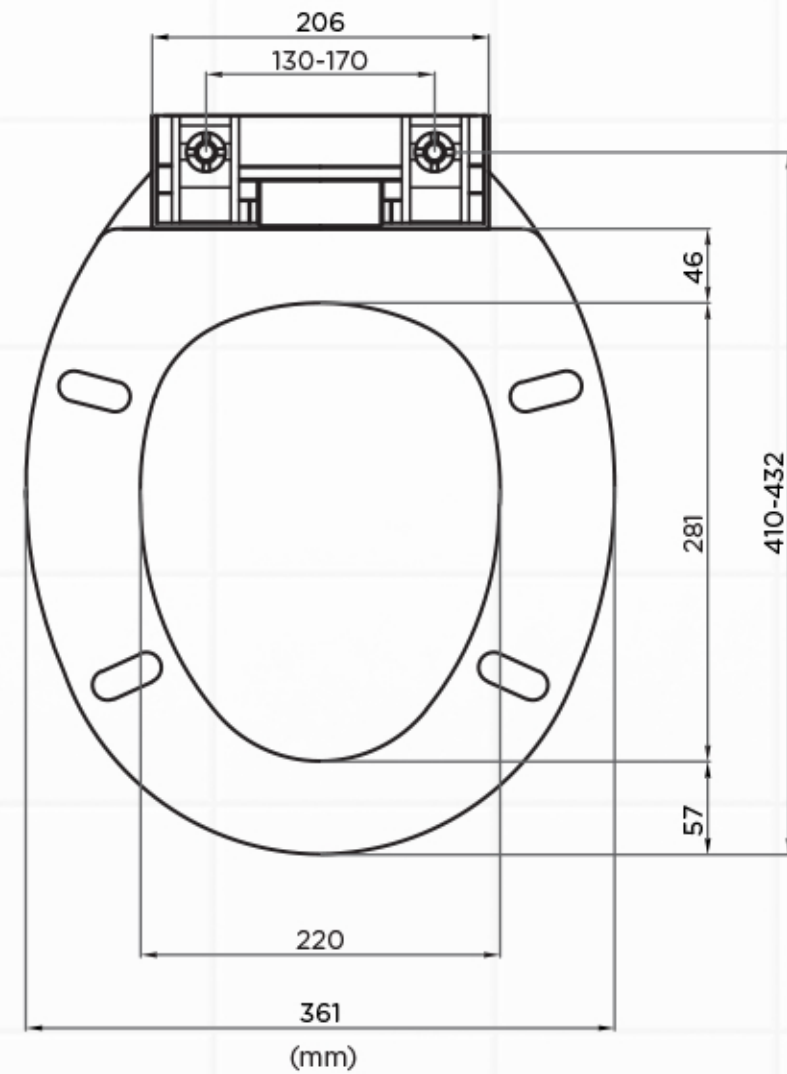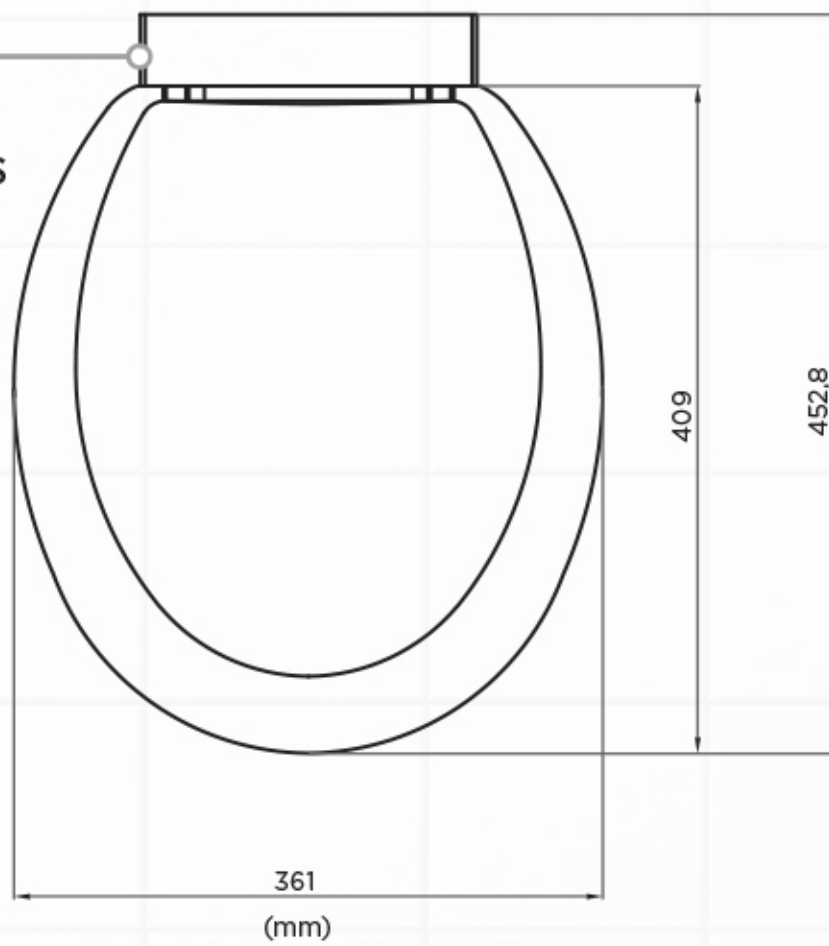
Easy to Install

Insert Seat Bolt Plates in Connection plate (follow arrow guides).

20mm
Seat Plate
Seat Bolt

For Link Application:
Insert link to seat connection plate. Set seat bolts into pan holes and hand-tighten seat bolt nuts.

For Non-Link Application:
Set seat bolts into pan holes and hand-tighten seat bolt nuts.

For Installation Assistance, Visit: **www.fluidmaster.com.au**

Fluidmaster®

Upgrade to the Brand Trusted by Professionals and Toilet Manufacturers worldwide

1
YEAR WARRANTY